ACN 070 053 584

23-25 Production Ave Molendinar, Queensland, 4214 Australia

ABN 39 070 053 584

Phone 07 55949844 Fax 07 55949079 Email sales@rg.com.au

SERVICE BULLETIN

Rev. No.	Date	Author	Description
Original Issue	2-03-2016	G. Cheetham	Original Issue

MACHINE OR VEHICLE AFFECTED: TF Model MEWPs

SERIAL NOS: 1499 onwards

RISK IDENTIFIED: Structural Cracks in Main Boom Rest

DESCRIPTION: Structural cracks can occur in the lower part of the main

boom rest

REPAIR PROCEDURE

Refer to procedure below:

Overview: This procedure outlines the actions required to repair cracks within the boom rest of a TF basket

Ensure all of this work is carried out in a safe working environment. All work is to be carried out by a competent tradesperson.

Parts & Equipment Required:


Safety Glasses & relevant PPE Grinder and relevant welding equipment Plate 5mm


Procedure


Follow the proceeding instructions for directions for repairing the affected area:

- 1. Drill a 3mm hole in the end of each crack
- 2. Grind away all welds containing any cracks
- 3. Re-weld all welds that were ground away
- 4. Consult the assembly drawing found on page 2 and mark out all areas receiving new plates. Grind away surrounding paint to ensure a clean welding surface.

5.	Make 2x Top doubler plates and 2x Bottom gussets. Drawings can be found on pages 3 & 4.
6.	Weld in all 4 additional plates in accordance with the assembly drawing (page 2). a. The electrical cable on the RHS must be well protected during welding to avoid
7.	damage. Once cool, re-paint all exposed surfaces.
7.	Once cool, to punit un exposed surfaces.
	Page 2 of 6

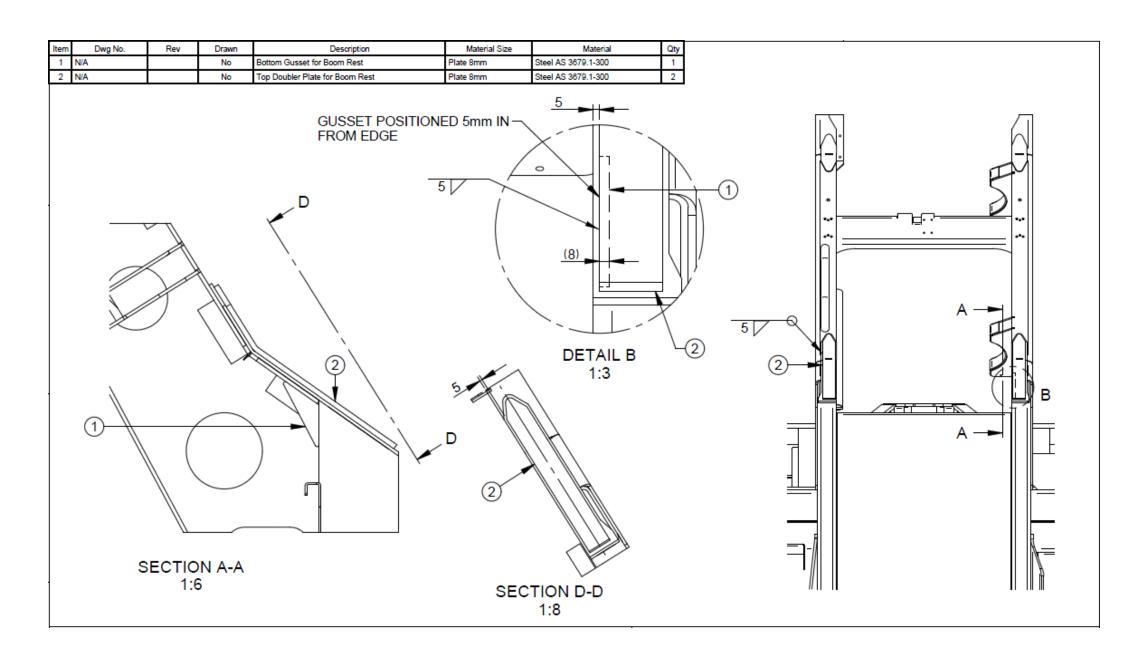

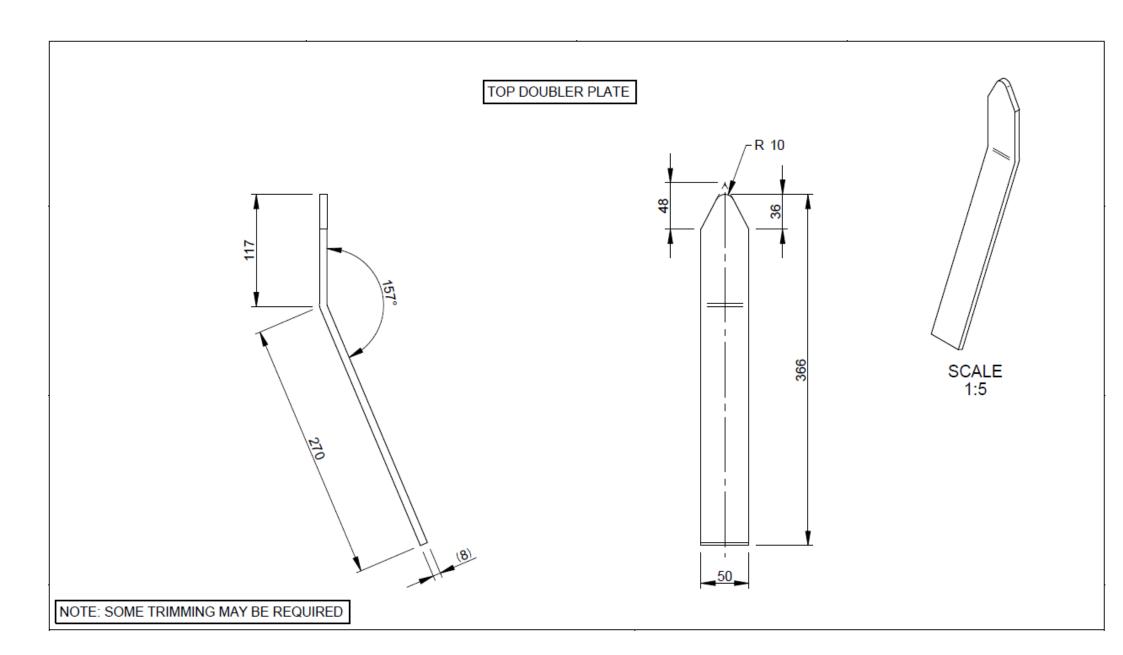

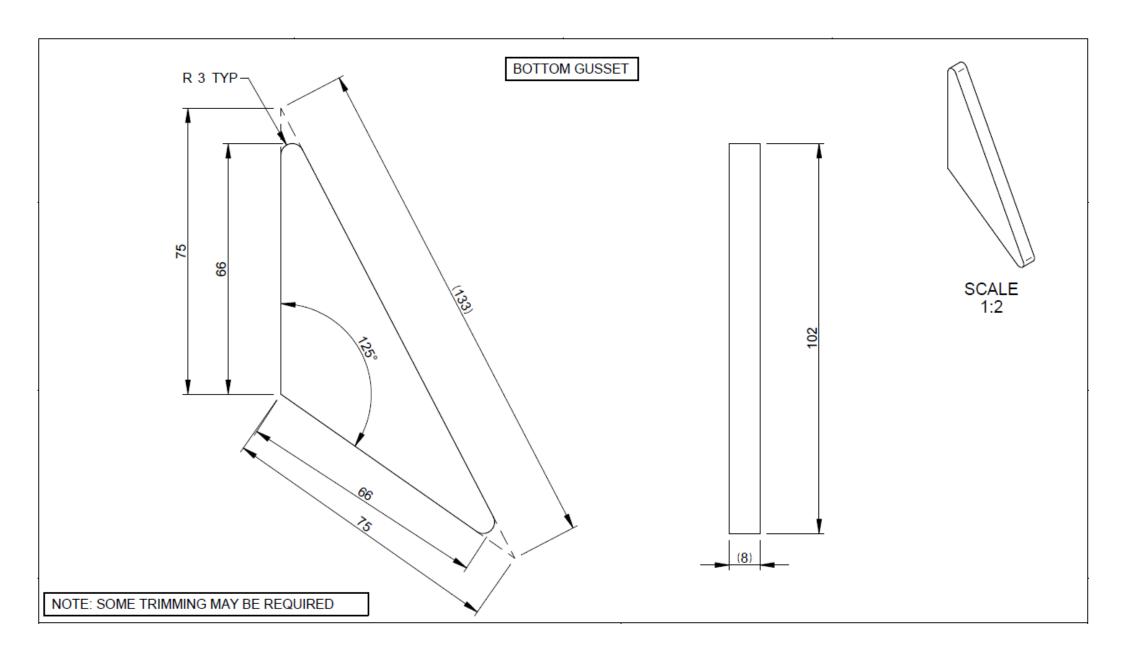

MEWP owners must circulate this bulletin to all their maintenance personnel.

RG ACTION REQUIRED:

The current boom rest design will be analysed and modified as required, for new MEWPs.

Please contact Grant Cheetham, our Service & Spare Parts Manager, on (07) 5594 9844 or Mobile 0438 748 363, if further information is required.

.....

Grant Cheetham

Service & Spare Parts Manager