

Redmond Gary

RG

Australia Pty.Ltd.

ACN 070 053 584

23-25 Production Ave
Molendinar, Queensland, 4214
Australia

ABN 39 070 053 584

Phone 07 55949844
Fax 07 55949079
Email sales@rg.com.au

SERVICE BULLETIN

Rev. No.	Date	Author	Description
Original Issue	3-03-2016	G. Cheetham	Original Issue

MACHINE OR VEHICLE AFFECTED: Self Loading Cable Trailers

SERIAL NO's: All

RISK IDENTIFIED: Nil

DESCRIPTION: Revision of Maintenance Schedules

CURRENT SERVICE SCHEDULE

DAILY SERVICE BY OPERATOR

Engine Oil	Check level and top up
Hydraulic Oil	Check level and top up
Radiator Coolant	Check level and top up
Lights & Connections	Check condition and operation
Safety Chains	Check Condition
Towing Eye	Check condition and security before towing
Tyres & Wheel Nuts	Visual Inspection – Check for tightness. Check tyre pressure (indicated on mudguard)
General	Check for damaged or missing components etc.

“A” SERVICE – FORTNIGHTLY – BY OPERATOR

Jockey Wheel	Check condition
Loading Chains	Check condition
Trailer	Clean and inspect
Battery	Clean, check level, top up and lubricate terminals
Air Cleaner	Inspect

Refer to Kubota Manual for service schedule for Engine

FOR EASY SERVICE - *Remove the lockable cabinet enclosing the hydraulics and engine. This cabinet is removed by opening both lids and unbolting 4 bolts located on the four corners of the cabinet at the chassis level. Two people can then lift the cabinet clear of the trailer. This will make engine and all hydraulic parts easily accessible for servicing purposes.*

**Refer to Sheets from Rogers for
Maintenance Guide for Brakes**

CURRENT LUBRICATION SCHEDULE

HALF YEARLY BY MECHANIC

Hydraulic Oil Filter	Renew
Front Jackleg	Lubricate
Towing Eye	Lubricate
Suspension Bush and brake	Grease

“B” SERVICE – YEARLY BY MECHANIC

Hydraulic System	Test hydraulic pressure relief valve
Wheel bearings & Seals	Clean, inspect, replace if necessary and repack.
Towing eye	Remove securing nut and check condition of threads.
Capstan winch gearbox	Change oil

**Refer to Kubota Manual for engine lubrication schedule
(Pages 9 & 10)**

REVISED SERVICE SCHEDULE

DAILY SERVICE BY OPERATOR

Engine Oil	Check level and top up
Hydraulic Oil	Check level and top up
Radiator Coolant	Check level and top up
Lights & Connections	Check condition and operation
Safety Chains	Check Condition
Towing Eye	Check condition and security before towing
Tyres & Wheel Nuts	Visual Inspection – Check for tightness. Check tyre pressure (indicated on mudguard)
General	Check for damaged or missing components etc.
Jockey Wheel	Check condition
Loading Chains	Check condition
Trailer	Clean and inspect
Battery	Clean, check level, top up and lubricate terminals

Refer to Kubota Manual for service schedule for Engine

FOR EASY SERVICE - *Remove the lockable cabinet enclosing the hydraulics and engine. This cabinet is removed by opening both lids and unbolting 4 bolts located on the four corners of the cabinet at the chassis level. Two people can then lift the cabinet clear of the trailer. This will make engine and all hydraulic parts easily accessible for servicing purposes.*

**Refer to Sheets from Rogers for
Maintenance Guide for Brakes**

REVISED LUBRICATION SCHEDULE

HALF YEARLY BY MECHANIC

Hydraulic Oil Filter	Renew
Front Jackleg	Lubricate
Towing Eye	Lubricate
Suspension Bushes and Brakes	Grease
Air Cleaner	Inspect
General Chassis Structure	Inspect

“B” SERVICE – YEARLY BY MECHANIC

Hydraulic System	Test hydraulic pressure relief valve
Wheel bearings and Seals	Clean, inspect, replace if necessary and repack.
Towing eye	Remove securing nut and check condition of threads.
Capstan winch gearbox	Change oil

**Refer to Kubota Manual for engine lubrication schedule
(Pages 9 & 10)**

CUSTOMER ACTION REQUIRED:

SLCT owners must circulate this bulletin to all their maintenance personnel.

RG ACTION REQUIRED:

Manual updates will be provided with this service bulletin.

Please contact Grant Cheetham, our Service & Spare Parts Manager, on (07) 5594 9844 or Mobile 0438 748 363, if further information is required.

.....
Grant Cheetham
Service & Spare Parts Manager